



5 Set-up

5.1 C/K setting

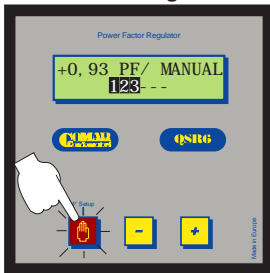

Push 4 seconds for aut. functioning

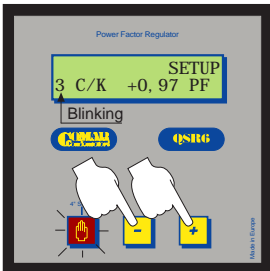

The suggested value to set is given on the table.

Use the  or  buttons to change the selection.

T.A. - C.T.	Power 1 st bank (kvar)							
	5	6	10	12,5	20	25	40	50
30/5	5	5	-	-	-	-	-	-
50/5	3	4	5	-	-	-	-	-
60/5	3	4	5	5	-	-	-	-
80/5	3	3	5	5	-	-	-	-
100/5	3	3	3	4	5	-	-	-
150/5	2	3	3	3	5	5	-	-
200/5	2	2	3	3	3	4	5	-
250/5	2	2	3	3	3	3	5	5
300/5	2	2	2	3	3	3	4	5
400/5	2	2	2	2	3	3	3	4
500/5	1	2	2	2	3	3	3	3
600/5	1	1	2	2	2	3	3	3
800/5	1	1	2	2	2	2	3	3
1000/5	1	1	1	2	2	2	3	3
1200/5	1	1	1	1	2	2	2	3
1500/	1	1	1	1	2	2	2	2
2000/5	1	1	1	1	1	1	2	2
2500/5	1	1	1	1	1	1	2	2
3000/5	1	1	1	1	1	1	2	2
4000/5	1	1	1	1	1	1	1	2

When the CT secondary current signal is lower than 2 amps, the C/K value should be increased by 0,1.

When using the regulator on 220Vac networks the C/K values should be doubled.

"-" means installation of C.T. with primary value too small.

ENGLISH